


Shipment status	
Free	The device is in standby mode and has not received any information about being allocated to a shipment.
Paired	The device has received shipment information from the cloud, but the starting conditions have not been met.
Shipping	The device is paired to a shipment that has met the start conditions. Data is uploaded to the cloud as per wake-up interval.
Stopping	The stop button is pushed while the device is in an active shipment.
Stopped	Stopping conditions are met. The device has been delivered.


Temperature		
MAX 24.8°C 23.5°C MIN 22.4°C	The center displays the last registered temperature. Max/Min values registered during the shipment are shown above/below the last registered temperature while the device is paired with an active shipment or recently delivered shipment.	
Display does not function in the current temperature.	The display is inactive due to the temperature being below 0°C (32°F) or above 50°C (122°F). The device continues to function and collect data within its operation range.	



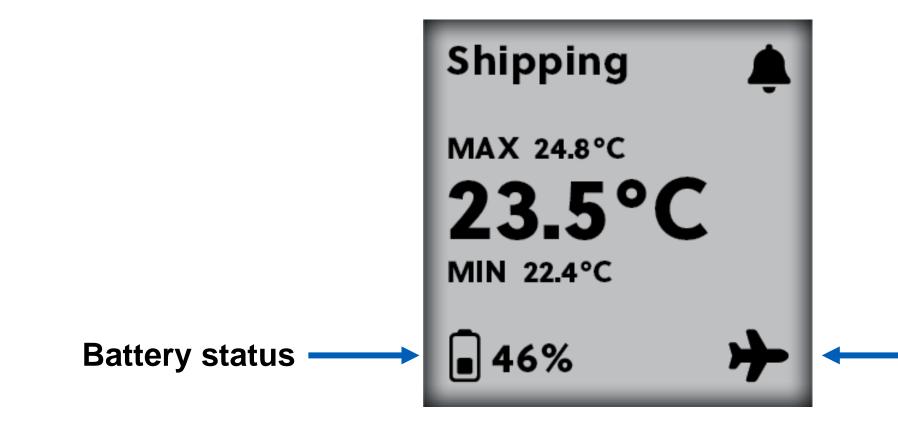


Cloud connection status

Battery status		
•	A USB icon appears for a few moments when the device is plugged in to a charging station or a USB port on a computer.	
4	The battery is currently charging. It can charge in a Controlant charging station, USB charging adapter or a computer USB port.	
Z	Charging has paused due to the internal temperature of the device being below 0°C (32°F) or above 40°C (104°F). Charging will restart once the device heats up or cools down respectively.	
100%	The device is plugged in, and the battery is fully charged.	
46%	The remaining battery percentage represented by the black bar and the percentage.	
Low power mode Logger is now in low power mode. Please charge device.	The battery level is below 10%.	

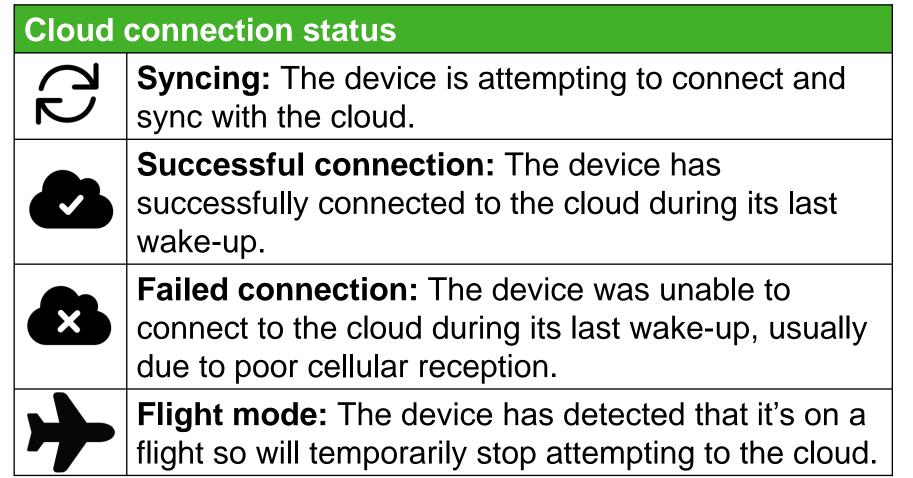



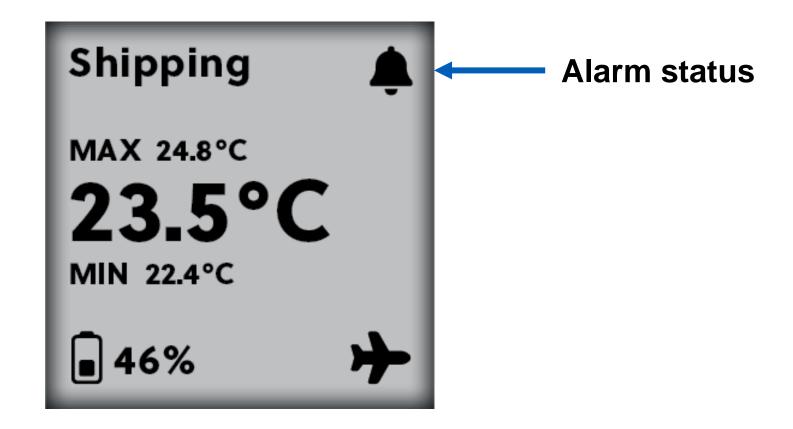

Alarm status



Temperature excursion(s) has occurred in the shipment. This icon will remain present throughout the shipment. If no icon is present, the temperature was within range for the full shipment duration.

Full screen messages



Device needs service

The device requires service. Customers are encouraged to set the device aside and follow the existing process to return it to Controlant. The device can only display this message when its status is free.

